



广州市佩奇机械设备有限公司

Guangzhou Peiqi Machinery Equipment CO.,LTD



地址：广州市中山大道东268号柏盈商厦223室

联系人：李文霞

手机：+86-13660863681 14749336079

邮箱：jbparts@aliyun.com

网站：http://jbparts.en.alibaba.com

Add: No.268 East Zhongshan Avenue, Boying Commercial building Room No.223,

Huangpu District,Guangzhou 510700, China

Contact Person: Sandy Li

WhatsAPP/Wechat : +86-13660863681 14749336079

Skype:sandy201199

Email : jbparts@aliyun.com

Web site : http://jbparts.en.alibaba.com

工程机械配件图册

CONSTRUCTION MACHINE CATALOG



佩奇机械
PEPPA MACHINERY

Honesty, Service Foremost

ABOUT PEIQI

广州佩奇机械设备有限公司是一家专业致力于挖掘机配件批发零售，我司立足广州最大的批发中心，主要出口至东南亚，非洲，中东，非洲，北美，南美，欧美等多个国家和地区销售挖掘机配件并提供专业配件销售建议和咨询。

我们热销的产品如：NOK泵阀修理包，SKF 品牌油缸修理包，PQ品牌油缸修理包，油封散件。

PQ品牌挖机OEM配套的电器件，如：电磁阀/传感器/控制阀/水温/转速/电脑版/仪表/显示屏/电路线束/油门马达/电机/等电器产品，价格优势，质量稳定，更耐用，我们深受各种客户的信任，分销与供应给他们的产品和需求，我们给终为客户提供最好的服务。

Guangzhou Peiqi Machinery Equipment Co., Ltd. is a professional supplier for all kinds of excavator electrical parts and excavator parts. Located in Guangzhou, our company mainly exports to Southeast Asia, Africa, the Middle East, Africa, North America, South America, Europe and the United States and other countries and regions to sell excavator parts and provide professional parts sales advice and consultation.

Our main products for excavator OEM supporting electrical parts, include Solenoid valve, Sensor, Pressure switch, Stepper Motor Assy, ECU Controller, Monitor, wire harness and other electrical products with genuine and aftermarket quality, price advantage, quality is stable, durable, we are trusted by various customers to distributed and supply their products and needs, we always try to provide the best service to our customers.

And we have other hot sell product for excavator seal kits and breaker hammer seal kit, include with separate seals, BOOM ARM BUCUKET seal kit, main pump valve seal kit, Control valve seal kit, Regulator repair kit, and lift cylinder seal kit and steering cylinder seal kit, those parts are very popular from our customer, and More than 85 countries has established a stable partnership with our company, and we will develop more oversea customer make long-term cooperation with us, and win-win business relations each other.



001	转速传感器 Revolution Sensor
004	凸轮轴传感器 Camshaft Sensor
008	进气压力传感器 Air Pressure Sensor
010	机油感应器 Oil Pressure Switch
016	水温感应器 Water Temp Sensor
026	压力开关 Pressure Switch
036	SCU阀 SCU Valve
038	高压油泵（共轨管）
039	继电器系列 Starter Relay
046	备用开关 Spare Switch
049	微动开关 Switch Ass'y
051	液压锁开关 Hydraulic Lock Switch
052	油门旋钮 Dial.fuel
055	油门马达零件 Throttle Motor Parts
056	自动油门马达 Accelerator Motor
060	通用计时器 Time Meter
061	电磁阀 Solenoid Valve
076	电磁阀线圈 Solenoid Valve Coil
080	点火开关 Ignition Switch
084	熄火开关 Flameout Solenoid
090	插头系列 Plug
097	线束 Wiring Harness
103	二极管 Diode
104	风扇离合器 Fan Clutch
105	电脑版 Controller
108	显示屏 Monitor
111	空调面板 Control Parts
113	检测仪 Survey Meter/detector
114	F&r Switch
116	油阀传感器 Fuel Tank Sensor
119	雨刮电机系列 Wiper Motor
124	灯 Lamp
126	起动马达 Starting Motor
130	磁力开关 Magnetic Switch
131	发电机 Alternator
135	柴油箱盖 Fuel Tank Cap
139	水箱盖 Water Tank Cap
140	机油盖 Oil Tank Cap
141	呼吸滤 Breather
143	废气盖 Breather
145	放油阀 Oil Drain Valve

目录



KOMATSU 小松系列

机型 Model	发动机型号 Engine	机型 Number	发动机型号 Engine	机型 Model	发动机型号 Number
PC30	3D34	PC200-3旧	S6D105	PC300-3	S6D125-1
PC40	4D84	PC200-5	SA6D95L	PC300-5	S6D108-1
PC56-7	S4D87E-1	PC200-6	S6D95L	PC300-6	SAA6D108E-2
PC60-7	4D102	PC200-6(山推)	S6D102E-1-A	PC310	S6D108-1
PC60-8	SAA4D95LE-5	PC200-7	S6D102	PC350	S6D108-1
PC70-8	SAA4D95LE	PC200-8	SAA6D107E-1	PC300-7	6D114
PC100-1	S4D105-5	PC210-5	SA6D95L	PC360-7	6D114
PC100-3	6D95L	PC210-6	S6D95L	PC400-1	NT855
PC100-5	S4D95L-1	PC220-1	S6D105	PC400-3	S6D125-1
PC110-7	SAA4D95LE-3	PC220-2	S6D105	PC400-5	S6D125-1W
PC120-1	S4D105-5	PC220-3	S6D105-1	PC400-6	SA6D125E-2
PC120-3	6D95L	PC220-5	SA6D95L	PC400-8	SAA6D125E-5
PC120-5	S4D95L-1	PC220-6(山推)	SA6D102E-1-A	PC410	S6D125-1
PC130-7	SAA4D95LE-3	PC220-7	SA6D102E-1-A	PC450-8	SAA6D125E-5
PC150-1	6D105	PC230-6	SA6D95L	PC650-3	SA6D140
PC150-3	S6D95L	PC240LC-8	SA6D107E-1	PC710-5	SA6D104
PC200-1	6D105-1	PC300	N855	PC1000-1	S6D170B
PC200-2	S6D105	PC300-1	NT855		
PC200-3新	S6D105	PC300-2	NT855		

HITACHI 日立系列

机型 Model	发动机型号 Engine	机型 Number	发动机型号 Engine	机型 Model	发动机型号 Number
EX60-2	BD30	EX220	H06RCT	ZAX60	4JG1
EX90	4BD1	EX220-2	H06C-T	ZAX70	4JG1
EX100	4BD1	EX220-3	H06C-T	ZAX120	4BG1TC
EX100W	6BB1	EX270	H06CT-1	ZAX120-6	4BG1
EX100WD-2	6BB1	EX270-2	H06CT-1	ZAX200	6BG1T
EX100-2 4	4BD1-T1	EX300	EP100T	ZAX200-3G	AA-6WG1T
EX100-3	4BD1-T1	EX300-1	ERP100T	ZAX230-6	6BG1T
EX120	4BD1-T	EX300-2/3	6SD1-T	ZAX240-3	4HK1
EX120-2	4BD1-T	EX300-5	6BG1T	ZAX240-3G	AA-6WG1T
EX120-3	4BD1-T	EX400	6RB1-T	ZAX250-3	4HK1
EX120-5	4BG1	EX400-3		ZAX330-3	6HK1
EX130	4BG1	EX400-5		ZAX330-3G	AA-6HK1XQA
EX150	4BD1-T	UH-035/7	4BB1	ZAX350-3	6HK1
EX160WD	6BB1	UH04/2/5	6BB1	ZAX360-3G	AA-6HK1XQA
EX200-1旧	6BD1-T	UH05	EC100	ZAX360LC-3	AH-6HK1X
EX200-1	6BD1-T	UH055-7	6BB1	ZAX450-3	6WG1
EX200-2	6BD1-T	UH06	DA640	ZAX470-3	AH-6WG1XYS-01
EX200-3	6BD1-T	UH06-5	6BD1		
EX200-5	6BG1	UH07-7	6BD1-T		

CAT ERP ILLAR 卡特系列

机型 Model	发动机型号 Engine	机型 Number	发动机型号 Engine	机型 Model	发动机型号 Number
E40B	4D32	E300B	4SA1	E320B/BL	3166
E70	4D31	E450	6D22-TC	E320C/CL	S6KT
E70B	4D32	E650	S6B-TA	E322/322L	3116
E110	4D31T	E235B/C/D	3306	E325/325L	3116
E110B	S4K-T	E245B/D	3406	E325B/BL	
E120B	S4K-T	E307/C	3406	E325C	
E120/140	6D14	E311B	4D32	E330/330	3306
E180	6D14-T	E312C/CL		E330B/BL	3306
E200/B	S6K-T	E315C/CL		E330C	C9
E240	6D15-T	E318B		E345B	
E240B	3116-T	E320/320L 旧	3066	E350/350L	3306
E300	4SA1	E320/L新	3066	E375N	3406

KOBELCO 神钢系列

机型 Model	发动机型号 Engine	机型 Number	发动机型号 Engine	机型 Model	发动机型号 Number
SK60	4JB1	SK210-8	J05E	SK330-8	J08E
SK100	4BD1	SK230-6E	6D34T	SK350-6	6D34
SK120-3	4BD1T	SK250-6	6D16T	SK350-8	J08E
SK120-6	6D31T	SK250-8	J05E	SK400	6D22
SK200-3	6D31T	SK260-8	J05E	SK450-6	6D24T
SK200-5	6D15	SK300	6D22T	SK460-8	P11C
SK200-6	6D34T	SK330-6	6D16	SK480-6	6D24

HYUNDAI 现代系列

机型 Model	发动机型号 Engine	机型 Number	发动机型号 Engine	机型 Model	发动机型号 Number
R55-7	4TNV94L	R215-7C	B5.9-C	R305LC-9	QSB6.7
R55-7S	4TNV-94L	R215-9	D6BV-C	R335LC-7	C8.3-C
R60-7	4TNV-94L	R215-9C	B5.9-C	R335LC-9	QSC
R60-9新	4TNV-94L	R220-5	6BT5.9-C	R375LC-7H	D6AC-C
R80-7	4TNV-98	R225LC-7	B5.9-C	R385LC-9	QSC
R80-9新	4TNV-98	R225LC-9T新	B5.9-C	R455LC-7	QSM11-C
R130-5	4BT3.9	R260-5	6B5.9-C	R485LC-9	QSM11
R150LC-7	B3.9-C	R265LC-7	B5.9-C	R485LC-9T新	QSM11-C
R150LC-9新	B3.9-C	R265LC-9	QSB6.7	R505LC-7	QSM11-C
R200LC	D6BR	R275LC-9T新	C8.3-C	R515LC-9T新	QSM11-C
R200-5	6BT5.9-C	R300-5	6CT8.3	R805LC-7	QXS15
R215-7	D6BT-C	R305LC-7	C8.3-C		

KATO 加藤系列

机型 Model	发动机型号 Engine	机型 Number	发动机型号 Engine	机型 Model	发动机型号 Number
HD250	4D31	HD550SE	6D14C	HD900-2	6D14CT
HD250SE	S4F	HD550G	6DS70	HD900-5/7	
HD300GS	6DS70	HD820-2	D31-T	HD1023	
HD350G	6DS30	HD700SE	6D14CT	HD1100	NH220
HD400/450	6DS70	HD700G	6D11C	HD1200G	6D22RCT
HD400G	6DS70	HD700-5	6D31-T	HD1220SE	6D22RCT
HD500/550	6DS70	HD700-5新	6D31-T	HD1250SEV	6D22T
HD400SE	6D14	HD700-7	6D31-T	HD1250-7	6D22T
HD400SEV	4D31RCT	HD800-5/7		HD1430	
HD400-5	6D31T	HD880	6D22	HD1500	NH220-V
HD450SE	6D31T	HD820	6D34	HD1800G	NH220-V
HD510	4D31-T	HD880SE-1/2	6D15RCT	HD1880SE	8DC9
HD512	6D31-T	HD900SEV	6D15RCT		

SUMITOMO 加藤系列 DOOSAN 斗山大字系列 VOLVO 沃尔沃系列

机型 Model	发动机型号 Engine	机型 Number	发动机型号 Engine	机型 Model	发动机型号 Number
SH45U	4D31	DH55	4JG1	EC55B LC	4TNV94
SH55	4JA1	DH60-7	4TNV94	EC140B	D4DEAE1
SH60	4JB1	DH130	DB58	EC210B	D6DEAE2
SH100	4BD1	DH170	6D16	EC240B	D7DEAE2
SH120	4BD1T	DH215-9E	DE08TIS	EC290BLC	D7DEAE2
SH145U	4D31T	DH220-3	D1146	EC360B	D10BEAE2 D12D
SH200	6BD1	DH220-5	DB58T	EC460B	D12D
SH200A3	6BG1T	DH220-9E	DE08TIS	EC380D	D13H-D
SH240-5	4HK1	DH258LC-V	D1146T	EC480D	DB-T4
SH300	D22T	DH280-3	D1146	EC700	D16E
SH350	6D24	DH300-5	D1146T1	EC750DL	D16E
SH350-5	6HK1	DH360-5	DE12T1	EC950EL	D16E
SH400	6RB1	DH220-9E	DE08TIS		
		DX300			



A01-1

转速传感器 Revolution Sensor
PC200-7 PC220-7
7861-93-2330

A01-2

转速传感器 Revolution Sensor
PC200-5/6 PC220-6
6D102 7861-92-2330

A01-3

转速传感器 Revolution Sensor
E320 196-7973/125-2966

A01-3A

转速传感器 Revolution Sensor
E320D 324-4131

A01-4

转速传感器 Revolution Sensor
E320C.B 5I-7579

A01-5

转速传感器 E329
318-1181 4P-5820 ϕ 16粗

A01-6

E330C/325C 189-5746 ϕ 19粗
转速传感器 Revolution Sensor

A01-7

CAT E200B S6K
转速传感器 Revolution Sensor

A01-7A

CAT 订制款
转速传感器 Revolution Sensor

A01-8

D04FR
SK130-8 SK140-8

A01-9

SK200-3/5 ME 845235
转速传感器 Revolution Sensor

A01-10

SK200-6/6E
转速传感器 Revolution Sensor

A01-10A

三一 SANY MC867505
转速传感器 Revolution Sensor

A01-11

SK200-8
转速传感器 Revolution Sensor

A01-11A

SK200-8 SK350-8
转速传感器 Revolution Sensor

A01-12

柴油泵转速传感器 6D24
ME755778 9443612071

A01-12A

柴油泵转速传感器 6D16
ME755970 9443613465

A01-13

EX(新款 NEW)
转速传感器 Revolution Sensor

A01-14

EX200-1/2/3/5
EX120 4265372
转速传感器 Revolution Sensor

A01-15

6WG1 ZAX450
1-81510713-1

A01-16

DH220-5 2547-1015
转速传感器 Revolution Sensor

A01-17

R220-5 21E3-0042
转速传感器 Revolution Sensor

A01-18

R225-7
转速传感器 Revolution Sensor

A01-19

住友 SH200A3
转速传感器 Revolution Sensor

A01-20

K19 3034572

A01-21

LIU GONG
307815/4984223

A01-21A

康明斯 双线 4327234

A01-21B

康明斯

<p>A01-21C</p> <p>PC1205-7 ZAX1200 4327239 3408472</p>	<p>A01-22</p> <p>柳工 LIU GONG 922D/936D</p>	<p>A01-23</p> <p>柳工 LIU GONG 920D/E</p>	<p>A01-24</p> <p>转速传感器 柳工907D/908CD 30B0202</p>
<p>A01-25</p> <p>转速传感器(NEW) 山重913 J213-92A-240001</p>	<p>A01-26</p> <p>转速传感器 福田雷沃 RL11-61C000003A0-1</p>	<p>A01-27</p> <p>CAT 290-5792 182-8597</p>	<p>A01-27A</p> <p>CAT 196-1185 转速传感器 Pressure Switch</p>
<p>A01-27B</p> <p>CAT 17136-0123</p>	<p>A01-27C</p> <p>转速传感器 265-9033 3508 3512</p>	<p>A01-27D</p> <p>CAT 258-4821-05</p>	<p>A01-28</p> <p>玉柴 转速传感器 Pressure Switch</p>
<p>A01-29</p> <p>康明斯 玉柴</p>	<p>A01-30</p> <p>转速传感器 玉柴 T0411-17102</p>	<p>A01-31</p> <p>转速传感器 玉柴 T0411-17103</p>	<p>A01-32</p> <p>转速传感器 玉柴 T0411-17104</p>
<p>A01-33</p> <p>转速传感器 山东卡特 ZG105A</p>	<p>A01-34</p> <p>转速传感器 詹阳中挖 ZG40-3/4-16UNF</p>	<p>A01-35</p> <p>转速传感器 中联150 G220-11-5TSWS</p>	<p>A01-36</p> <p>徐工</p>

<p>A01-37</p>	<p>A01-38</p> <p>康明斯 B3.3</p>	<p>A01-39</p> <p>Q216005</p>	<p>A01-40</p> <p>266-8576</p>
<p>A01-41</p> <p>CAT 522-1643</p>	<p>A01-42</p> <p>669 3921 Bab CAT</p>	<p>A01-43</p> <p>668 4037 S100-S160 Bab CAT</p>	<p>A01-44</p> <p>K19 转速传感器</p>
<p>A02-1</p> <p>E325C 254-4630 169-3300 凸轮轴传感器</p>	<p>A02-2</p> <p>E320D 238-0120 凸轮轴传感器</p>	<p>A02-2A</p> <p>CAT E320D2 384-3888 凸轮轴传感器</p>	<p>A02-2B</p> <p>358-2398 凸轮轴传感器</p>
<p>A02-2C</p> <p>358-2399 凸轮轴传感器</p>	<p>A02-3</p> <p>319-6491 凸轮轴传感器</p>	<p>A02-4</p> <p>E336 188-7513 201-6616 凸轮轴传感器</p>	<p>A02-5</p> <p>CAT 201-6615 凸轮轴传感器</p>
<p>A02-5A</p> <p>216-3446</p>	<p>A02-6</p> <p>转速传感器(飞轮) 6HK1/6BG1 1-81510343-2</p>	<p>A02-7</p> <p>8-97240790-0 五十铃 住友</p>	<p>A02-8</p> <p>4JJ1 SH160 8-97312108-1 偏心轴转速传感器</p>

A02-9

4HK1/6HK1 98014831-0
SH210-5 凸轮轴传感器

A02-10

4HK1/6HK1 97306113-1
转速传感器

A02-10A

4HK1 JCB
转速传感器

A02-11

五十铃
8-97122324-0

A02-25

VH89411E0050 2插
SK350-8 J05 曲轴传感器

A02-26

SK350-8 S841-01590
J08E 偏心轴转速传感器

A02-26A

日野 949979-1420
曲轴传感器

A02-27

D04FR SK140-8
曲轴传感器 长线

A02-12

五十铃
8-94370581-0

A02-12A

转速传感器 4HK1 6HK1
8-98019024-0

A02-13

VOLVO 临工 转速传感器
DEUTZ 0118-2850

A02-14

VOLVO 转速传感器
DEUTZ 0118-2834

A02-28

J05 S8941-01570
SK200-8 凸轮轴传感器

A02-28A

Perkins 1855-781C91

A02-29

JCB 716/30123

A02-29A

238-4676 ZGAO-00651

A02-14A

转速传感器 VOLVO D3.8

A02-15

VOE20450707 VOLVO
曲轴传感器

A02-16

VOE20482772 VOLVO210
凸轮轴传感器

A02-17

VOLVO360 VOE20508011
曲轴转速传感器

A02-30

DOOSAN DX260-9

A02-31

DOOSAN DX380 SCANIA

A02-32

DOOSAN DX470 SCANIA

A02-33

SANY三一 1319158
回转凸轮轴传感器

A02-18

VOLVO360 VOE20700060
进气传感器

A02-19

VOLVO480
4123-840 0281002315

A02-20

现代 R265-7 4921 597

A02-21

现代 R265-7 4921 599

A02-34

洋马 久保田 158557-61720

A02-35

4M50 HD820-5

A02-36

LIEBHERR 利勃海尔

A02-37

A02-22

D4921684 PC200-8
6754-81-9410

A02-23

D4921686 PC400-8
6261-81-2911

A02-23A

康明斯 5011855AA
4921 601

A02-24

偏心轴转速传感器 3插
PC400-7 6217-81-9210

A03-1

五十铃 ISUZU
8-12146830-0 进气感应器

A03-2

VOLVO 20450095
温度传感器(OLD)

A03-3

PC200/8 4076493
6261-81-1900

A03-4

PC200-8 4921322
6754-81-2701

A03-5



8-97217778-0
HITACHI 进气传感器

A03-6



VOLVO210
0281002566 0281002576

A03-6A



22422785

A03-7



VOE 20450693
VOLVO 进气传感器

A03-18



压差传感器
康明斯 1MPP2-1 玉柴

A03-19



大气压力传感器
SK200-8 ZAX200-3 E320C
VH893901080A

A03-20



ISUZU ZAX490-5A 6UZI
8-98121697-0

A03-21



ISUZU
8-98065377-0

A03-8



VOLVO 441050080

A03-9



真空开关
VOLVO 20565673
EC210/EC240/EC290/EC360

A03-10



VOLVO EC480 20542128

A03-11



VOLVO 20893503 5线

A03-22



斗山 SOOSAN 0261230112

A03-23



康明斯 4902720

A03-24



SK210-10 大气压力传感器

A03-25



约翰迪尔

A03-11A



VOLVO 20893503 6线

A03-12



CAT312D 266-0126
进气压力传感器

A03-12A



VOLVO 21442662
进气压力传感器

A03-12B



VOLVO
21304786 22181342

A03-26



PC400-8 6261-81-2700

A03-27



PC350-10
4984590 进气流量传感器

A03-28



CAT 266-1466

A03-29



266-1467

A03-12A



107-8618
进气温度传感器

A03-13



空气压力感应器
Air Pressure Sensor

A03-14



空气压力感应器
Air Pressure Sensor

A03-14A



CAT 381-9064

A03-30



266-1475

A03-31



266-1477

A03-32



266-1478

A03-33



266-1481

A03-15



PC200-7 7861-91-1420
空调传感器 Pressure Switch

A03-15A



PC200-8 Pressure Switch

A03-16



SH200 空气报警器

A03-17



6261-81-26000

A03-34



266-2337

A03-35




266-1484

A03-36



266-1492

A03-37



266-1492

<p>A04-1</p> <p>EX200-5 (单脚) 机油感应器 Oil Pressure Switch</p>	<p>A04-2</p> <p>PC200-6 6732-81-3140 08073-10505 机油感应器 Oil Pressure Switch</p>	<p>A04-3</p> <p>4JG1 机油感应塞</p>	<p>A04-4</p> <p>8-98086433-0 五十铃传感器</p>	<p>A04-18A</p> <p>卡特 CAT 3116 131-9203</p>	<p>A04-18B</p> <p>卡特 459-2594 459-2597</p>	<p>A04-18B</p> <p>459-2595</p>	<p>A04-19</p> <p>CAT E330B 3E-6455 机油感应器</p>
<p>A04-5</p> <p>EX200-5 (双脚) 6732-81-3140 08073-10505 机油感应器 Oil Pressure Switch</p>	<p>A04-6</p> <p>洋马 YANMAR 机油感应塞 Oil Pressure Switch</p>	<p>A04-7</p> <p>机油传感器 Oil Sensor</p>	<p>A04-7A</p> <p>机油传感器 Oil Sensor</p>	<p>A04-19A</p> <p>CAT 107-0612</p>	<p>A04-19B</p> <p>CAT 107-0613</p>	<p>A04-20</p> <p>CAT 铲车机油压力传感器 3408E 3208E 107-0614</p>	<p>A04-20A</p> <p>卡特 CAT 313-5104</p>
<p>A04-7B</p> <p>机油传感器 Oil Sensor</p>	<p>A04-8</p> <p>机油感应塞 E320C 266-6210 51-8005 34390-40200</p>	<p>A04-9</p> <p>SK230-6 机油压力传感器 Oil Pressure Switch</p>	<p>A04-10</p> <p>HINO SK200-8 SK350-8 J05 机油感应器 Oil Pressure Switch</p>	<p>A04-20B</p> <p>327-4608</p>	<p>A04-20C</p> <p>CAT 202-9002 压力传感器</p>	<p>A04-21</p> <p>PC200/8 6744-81-4010 机油感应塞 Oil Sensor</p>	<p>A04-22</p> <p>PC450-7 4921517</p>
<p>A04-11</p> <p>6BD1 EX200-1/2/3/5 机油感应器 Oil Pressure Switch</p>	<p>A04-12</p> <p>6BG1 机油感应器 Oil Pressure Switch</p>	<p>A04-13</p> <p>机油感应塞 ZAX330-3 6HK1 8-98027456-0 499000-7341</p>	<p>A04-14</p> <p>空气压力开关 4M50 MD176361</p>	<p>A04-23</p> <p>DEUTZ VOLVO 240 (老款)</p>	<p>A04-24</p> <p>VOLVO 210 D6D 04215774ED 21291011</p>	<p>A04-25</p> <p>VOLVO 20450687</p>	<p>A04-25A</p> <p>11039575</p>
<p>A04-15</p> <p>CAT 161-1703 机油传感器 Oil Sensor</p>	<p>A04-16</p> <p>161-1704-04 0249A 压力传感器 Pressure Sensor</p>	<p>A04-17</p> <p>161-1705-04 压力传感器 Pressure Sensor</p>	<p>A04-18</p> <p>CAT卡特 194-6722</p>	<p>A04-26</p> <p>VOLVO 21634021 机油感应塞 Oil Sensor</p>	<p>A04-26A</p> <p>VOLVO460 22899626 机油感应塞 Oil Sensor</p>	<p>A04-26B</p> <p>VOLVO 机油感应塞 Oil Sensor</p>	<p>A04-27</p> <p>VOLVO 03 4774 2132639/20484678</p>

A04-28



VOLVO 11039574

A04-29



VOLVO 480-1077574
机油感应塞 Oil Sensor

A04-30



VOLVO 21634017
Oil Pressure Sensor

A04-31



VOLVO 11170072

A04-43B



VOLVO 11419327

A04-43C



VOLVO 11039376

A04-44



661203
三一 机油压力传感器

A04-45



661204 机油压力传感器

A04-32



VOLVO 11170071

A04-33



VOLVO 11170090

A04-34



VOLVO 11170075

A04-35



VOLVO
11170079 11170076

A04-46



661003 机油压力传感器

A04-47



660404
三一 机油压力传感器

A04-48



631003 机油压力传感器

A04-49



柳工机油压力
34B1008 100096 34Bar

A04-36



11038813

A04-36A



VOLVO
11039549 21302639
15163008 11170259 11039721

A04-36B



VOLVO 11039577

A04-37



1771230

A04-49A



柳工机油压力
30B0897 10096

A04-49B



10316 523144 11Bar

A04-50



柳工 180030 17530
1.5Bar 2.0Bar

A04-51



徐工 Zmpar 101103

A04-37A



11418080

A04-38



11039557

A04-39



VOLVO

A04-40



780941

A04-52



P165-5183

A04-53



HYUNDAI 31NA-20080

A04-54



机油压力传感器 康明斯
山重/三一 B240600000286

A04-55



玉柴 机油感应塞

A04-41



15180002

A04-42



11039557 1008100096
柳工 NEW 机油感应塞

A04-43



5090257

A04-43A



11039662

A04-56



康明斯

A04-56A



康明斯 3846N-010-C1

A04-56B



康明斯

A04-56C



3015237S

A04-56D



墨菲 单脚

A04-56F



墨菲 双脚

A04-57



PC200-8 6040 低压

A04-58



PC200-8 5545 NEW
663-5545 421-43-22912

A04-59



PC200-8 4537
9Y2-4537 421-43-22922

A04-60



PC200-8
771-1409 低压

A04-61



机油传感器 DH80 DX80

A04-62



VOLVO 11039617

A04-63



柳工 36118-064530

A04-64



大宇 30143-00151

A04-65



13617-433026

A04-66



柳工 10213169

A04-67



20316 26877

A04-68



06912 019

A04-69



32216 142011

A04-70



09812 682

A04-71



3451 310

A04-72



01818 201005

A04-73



龙工 Oil Sensor

A04-74



MACHINERY PARTS



A05-1



VOLVO360 24424110

A05-1A



VOLVO
15193875 15001761

A05-2



VOLVO210
21391697 200mm

A05-2A



VOLVO210/210B
22383381 180mm

A05-3



VOLVO360/460/380/480
11423761 140mm

A05-4



VOLVO EC290 220mm
VOE 22383318 21391695

A05-5



VOLVO 17202022

A05-5A



VOLVO 17202021

A05-6



PC200-5 7861-92-4210
机油感应器 Oil Pressure Switch

A05-7



PC200-7 6741-81-9220
机油感应器 Oil Pressure Switch

A05-8



















KOBELCO SK200-6

A05-9



日立 ZAX HITACHI

<p>A05-10</p>  <p>E320C 213-0677 机油油位传感器</p>	<p>A05-11</p>  <p>SK200-6</p>	<p>A05-12</p>  <p>水位传感器 山重 J213-04A-041000</p>	<p>A05-13</p>
<p>A05-14</p>  <p>柳工 水位传感器</p>	<p>A05-15</p>  <p>日立油水传感器 ZAX200/210/240</p>	<p>A05-16</p>  <p>VOLVO EC360 水位传感器</p>	<p>A05-16A</p>  <p>VOLVO 210B 水位传感器</p>
<p>A05-16B</p>  <p>临工 VOLVO 210D</p>	<p>A05-17</p>  <p>VOLVO VOE 14541720</p>	<p>A05-18</p>  <p>PC WA380-3 小插</p>	<p>A05-19</p>  <p>PC WA470-3 7861-92-4500 大插</p>
<p>A05-20</p>  <p>7861-93-4520</p>	<p>A05-21</p>  <p>CAT 295-3099</p>	<p>A05-22</p>  <p>VOLVO 21285163</p>	<p>A05-23</p>  <p>氮传感器 L33C-18-8G1</p>
<p>A05-24</p>  <p>CAT 418-6597</p>	<p>QUALITY, HONESTY & SERVICE FIRST</p> <p>—— 诚信为本，服务至上 ——</p>		



<p>A06-1</p>  <p>CAT (螺牙16) 5I-7578 34390-00800</p>	<p>A06-2</p>  <p>E312D (螺牙18) Water Temp Sensor</p>	<p>A06-3</p>  <p>41-5394 (螺牙19) CAT330B Water Temp Sensor CAT330C HYD Oil Temp sensor</p>	<p>A06-4</p>  <p>E320C Water Temp Sensor 196-7975 34390-02200</p>
<p>A06-5</p>  <p>水温感应器 Water Temp Sensor E325 264-4297 130-9811 Φ19</p>	<p>A06-5A</p>  <p>水温感应器 Water Temp Sensor 203-3219</p>	<p>A06-6</p>  <p>水温感应器 Water Temp Sensor CAT 256-6453 C7/C9 Φ19</p>	<p>A06-6A</p>  <p>燃油油温传感器 C7 256-6454 Φ18</p>
<p>A06-7</p>  <p>水温感应器 Water Temp Sensor E320D 238-0112 Φ18</p>	<p>A06-8</p>  <p>水温传感器 Water Temp Sensor E311C 341-3600</p>	<p>A06-9</p>  <p>CAT 水温感应器 Water Temp Sensor</p>	<p>A06-9A</p>  <p>CAT 244-3106</p>

A06-10



E320D 2 2848A127
帕金斯 Perkins

A06-10A



2848A12

A06-10B



203-3221

A06-10C



7N9560

A06-25



水温感应塞 Water Temp Sensor
ZAX 电喷

A06-26



水温报警器 Water Temp Sensor
ZAX 电喷

A06-27



水温报警器 Water Temp Sensor
ZAX 200 1-83161033-0

A06-28



水温传感器 Water Temp Sensor
ZAXIS330 SH200A3
8-97217444-1

A06-11



2848A071 237-4894
帕金斯 Perkins

A06-12



385720510
帕金斯 Perkins

A06-13



Perkins 185246290
帕金斯机油传感器

A06-14



Perkins 2848A126
帕金斯柴油机温度开关

A06-29



水温传感器 Water Temp Sensor
6HK1

A06-30



水温感应器 Water Temp Sensor
EX200-2/3 6BD1 / 带线
1-83161019-1

A06-31



Water Temp Sensor
SK200-6 HD700-7(双脚)
6D31/6D34 Me049265

A06-32



水温报警器
SK200-6 HD700-7(单脚)
6D31/6D34 Me049265

A06-15



185246280
帕金斯 Perkins

A06-16



Perkins 2848A129
帕金斯温度传感器

A06-17



PC小松 08620-0000
水温感应器 Water Temp Sensor

A06-17A



五十铃 W4500
8-97078592-9 水温感应器

A06-32A



水温报警器
E200B ME049209 105

A06-33



水温感应器 Water Temp Sensor
神钢 SK200-6 SWZ489U268F1

A06-34



水温传感器 Water Temp Sensor
SK-8

A06-35



水温感应器 Water Temp Sensor
SH200-3

A06-18



PC200-7 7861-93-2310
7861-93-3320 水温感应器

A06-19



水温感应器 Water Temp Sensor
PC200-6 PC220-6
7861-92-3380

A06-20



水温感应器 Water Temp Sensor
PC200-5 7861-92-3320

A06-21



PC450-7/8 7861-93-3520
水温感应器 Water Temp Sensor

A06-36



SH200A3 KHR2433
3DA1223 179730-0040

A06-37



水温感应器(单脚)通用
ISUZU TOYOTA

A06-38



水温传感器(双插)通用

A06-39



水温报警器 HINO
SK350-8 S8346-01510

A06-22



PC200-8 6D107
水温感应器 Water Temp Sensor

A06-22A



PC600-8 6D140 6D170
6560-61-7300

A06-23



水温报警器 Ater Temp Sensor
ZAX200-5 1-82450013-0

A06-24



水温感应塞 Water Temp Sensor
日立 EX200-2/5 4257129

A06-39A



水温报警器 SK

A06-40



水温传感器
SK130-8 D04FR 32G90-00201

A06-41



J05E 4HK1
高压柴油泵油温传感器

A06-42



366869 4M40 CAT307
水温感应器 Water Temp Sensor

A06-43



A.细牙

洋马 YANMAR
水温感应器 Water Temp Sensor

A06-44



B.粗牙

洋马 YANMAR
水温感应器 Water Temp Sensor

A06-44A



洋马 YANMAR (双脚)
水温感应器 Water Temp Sensor

A06-45



洋马 YANMAR
水温感应器 Water Temp Sensor

A06-59



4921473

A06-60



柳工205/225 温度传感器
WG2704G 30B0260

A06-61



水温感应器 Water Temp Sensor
OEM:3015238

A06-62



水温传感器 柳工 30B0316

A06-46



洋马 YANMAR
水温感应器 Water Temp Sensor

A06-47



水温感应器 Water Temp Sensor
VOLVO210

A06-48



VOLVO 15048183/11144494
水温感应器 Water Temp Sensor

A06-49



VOLVO 480D 11419186
水温感应器 Water Temp Sensor

A06-63



水温传感器 柳工 30B0252

A06-64



水温感应塞
柳工906 30B0409

A06-65



水温传感器
柳工906C 30B0289

A06-66



水温传感器
柳工908C/200 30B0260

A06-50



φ18

EC210B/290B VOE11039194
水温感应器 Water Temp Sensor

A06-51



φ16

EC210B/290B VOE11039193
水温感应器 Water Temp Sensor

A06-52



VOLVO360 205-76614
水温感应器 Water Temp Sensor

A06-52A



VOLVO 20429956

A06-67



水温传感器 柳工 30B0321

A06-68



柳工205/225 温度传感器/带线
WGP3343 30B0322

A06-69



温度传感器 柳工 230B0400

A06-70



液压油水温传感器
柳工 30B0264

A06-52B



VOLVO 2096397

A06-52C



VOLVO 15153124

A06-53



PC400-6 3915329
水温感应器 Water Temp Sensor

A06-54



DH220-5
水温感应器 Water Temp Sensor

A06-71



油温度传感器 30B0322

A06-72



油温传感器 中联

A06-73



水温传感器
石川岛 JET00015

A06-74



4327021

A06-55



HYU NDAI
21EA-62010 R60-7
水温感应器 Water Temp Sensor

A06-56



HYU NDAI
21EN-40100 R225-7
水温感应器 Water Temp Sensor

A06-57



4921477

A06-58



4921475

A06-74A



3408627

A06-75



水温传感器
徐工150 XE150-001

A06-76



水温传感器
龙工小挖 JET00018

A06-77



温度传感器 国机重工235/255
14NPTF-M22X1.5

A06-78



温度开关 30B0271

A06-79



三一 SANY
油温传感器 7240-A-015

A06-80



三一 SANY 温度传感器

A06-81



徐工

A06-88B



CAT 100-3055

A06-88C



CAT 134-2252

A06-88D



CAT 131-0784

A06-88E



CAT 430-9449

A06-82



SUMITOMO 住友液压油传感器

A06-83



SUMITOMO 住友液压油传感器

A06-84



3E5370 3116

A06-84A



102-3190 102-0050

A06-88F



CAT 430-9451

A06-88G



CAT 130-9811

A06-89



神钢 KOBELCO

A06-90



徐工 239-9957 4903489

A06-85



CAT 131-0427

A06-85A



CAT 130-8299

A06-85B



CAT 371-9531

A06-86



CAT 102-2240

A06-91



徐工

A06-92



徐工470D

A06-92A



徐工 大螺丝

A06-93



康明斯 4383933

A06-86A



195-2150

A06-86B



CAT 145-7028

A06-86C



机油油温传感器
CAT 191-6587

A06-86D



CAT 106-0735

A06-94



水温传感器 178-2334-00

A06-95



E320C/330C 178-2335

A06-96



JOHN DEERE

A06-97



SCANIA DX470

A06-86E



CAT 108-3190

A06-87



CAT 171-8708

A06-88



118-7226 3508

A06-88A



CAT 3E-8700

A06-98



2479R546

A06-99



DEUTZ 01182700

A06-100



五十铃 8-98156648-0

A06-101



SK130-8

A06-102



小松装载机 232-06-52410

A06-103



订做款

A06-104



8-97063301-0 4LE2

A06-105



久保田

A07-9



4921495

A07-10



3408607

A07-10A



23527829

A07-10B



23527828

A06-106



QM11
3085185X 空气温度传感器

A06-107



A06-108



水温传感器
约翰迪尔 RE516336

A06-109



水温传感器
约翰迪尔 RE52722

A07-11



4921505

A07-12



4921499

A07-13



4928593

A07-14



4921519

A06-110



水温传感器
约翰迪尔 RE51774

A06-111



3865312

A07-15



4921493

A07-16



JCB 701/80389

A07-17



JCB 701/80317

A07-18



JCB 716/24200

A07-1



4921511

A07-2



4921487

A07-3



4921501

A07-4



4928594

A07-19



JCB 701/80324

A07-20



JCB 716/12800

A07-21



JCB 701/37400

A07-22



JCB 716/30126

A07-5



4921503

A07-6



2897690

A07-7



4921519

A07-8



4921489

A07-23



JCB 701/80627

A07-24



JCB 701/43700

A07-25



JCB 701/80591

A07-26



JCB 701/41700

<p>A07-27</p> <p>JCB 701/80225</p>	<p>A07-28</p> <p>JCB 320/04046</p>	<p>A07-29</p> <p>JCB 701/41600</p>	<p>A07-30</p> <p>JCB 320/04588</p>
<p>A07-31</p> <p>JCB 332/J2973</p>	<p>A08-1</p> <p>PC220-8/220/240-8 600-311-3721 油水分离器传感器</p>	<p>A08-2</p> <p>CAT320D 3针 423-66434-01</p>	<p>A08-3</p> <p>CAT336D 4针 382-2001</p>
<p>A08-4</p> <p>VOLVO 360</p>	<p>A08-5</p> <p>VOLVO</p>	<p>A08-6</p> <p>徐工 液压油传感器</p>	<p>A08-7</p> <p>CAT 439-5039</p>
<p>A08-8</p> <p>117-4089 玻璃杯传感器</p>	<p>A08-9</p> <p>FS1242 玻璃杯传感器</p>	<p>A08-10</p> <p>FS1242 R120P R90P 通用玻璃杯传感器</p>	<p>A08-11</p> <p>玉柴两管</p>



<p>A09-1</p> <p>PC200-7 206-06-61130</p>	<p>A09-2</p> <p>PC200-6 6D95 20Y-06-21710</p>	<p>A09-3</p> <p>PC200-8 低压 7861-93-1840</p>	<p>A09-3A</p> <p>PC400-8 208-06-71140</p>
<p>A09-3B</p> <p>PC400-8 208-06-71130</p>	<p>A09-4</p> <p>PC200-5 (小松带线) 207-06-15190 压力开关</p>	<p>A09-5</p> <p>PC200-6 行走压力开关 D4C-9093 203-06-5621</p>	<p>A09-6</p> <p>6D107 4921497</p>
<p>A09-7</p> <p>E330D 194-6725</p>	<p>A09-8</p> <p>CAT 194-6724</p>	<p>A09-8A</p> <p>传感器 114-5333</p>	<p>A09-8B</p> <p>传感器 167-1709</p>

QUALITY, HONESTY & SERVICE FIRST
—— 诚信为本，服务至上 ——

A09-9

E200B 液压传感器

A09-10

E300(小圆) 液压传感器

A09-11

E300(大圆) 液压传感器

A09-12

106-0180 (大方插)
压力开关 Pressure Switch

A09-22

CAT 320-3060

A09-22A

320-3061

A09-23

机油感应器 C13
CAT336D 274-6719

A09-24

CAT 296-8060

A09-13

106-0179 (小方插)
压力开关 Pressure Switch

A09-14

E320 106-0180
119-9985 小圆 压力开关

A09-15

E320B/C 126-2938X03 大圆
压力开关 Pressure Switch

A09-15A

CAT (大圆插)
压力开关 Pressure Switch

A09-25

CAT 161-9926

A09-26

CAT 276-6793

A09-26A

349-7378

A09-26B

320-3062

A09-15B

压力传感器 173-7252

A09-16

压力传感器
E320D 309-5769

A09-17

压力传感器
E320D 309-5795

A09-17A

压力传感器 E320

A09-26C

320-3063

A09-27

加藤 22F-06-33430
压力传感器 Pressure Switch

A09-28

住友 20PS297-5
压力传感器 Pressure Switch

A09-29

EX200-5 4380677
压力传感器 Pressure Switch

A09-17B

压力传感器 卡特 CATGC

A09-17C

DX DOOSAN 301413-00287

A09-17D

机油传感器
CAT320D 453-5523-02

A09-18

CAT320 机油感应器
CAT 274-6721

A09-30

EX200-2/3 20PC586-8
压力开关 Pressure Switch

A09-31

HITACHI 压力开关
4353686

A09-32

HITACHI 压力开关
ZAX230/240 4332040

A09-33

HITACHI 压力开关 4436536

A09-19

CAT320D 进气传感器
CAT 274-6720

A09-20

CAT 274-6717

A09-21

CAT 274-6718

A09-21A

CAT 305-6873

A09-34

HITACHI 压力开关
4436535

A09-34A

6WG1 ZAX470
压力传感器 42CP13-1

A09-35

日立液压传感器 4259333

A09-36

DH220-5 20P-586-19
压力开关 Pressure Switch

A09-37

HYUNDAI 20PS981-2H9Z

A09-38

R 20PS981-3

A09-38A

现代 20PS982-1

A09-39

VOLVO 20PS982-2

A09-40

住友 SUMITOMO 20PS597-5

A09-41

力士德 KOBELCO SK压力开关

A09-42

JCB 332/J0669

A09-43

JCB 332/J0670

A09-44

JCB 332-10671

A09-45

压力传感器 RE542461-2011C

A09-46

52CP34-03

A09-47

DX DOOSAN

A09-48

239-3478



A10-1

神钢SK-6E高压 LC52S00012P1 8607307 LS52S00011P1

A10-2

压力传感器 Pressure Switch 神钢SK200-8 高压 LC52S00015P1

A10-3

压力传感器 Pressure Switch 神钢SK200-8 NEW YN52S00103P1

A10-4

Pressure Switch 神钢SK 低压 LC52S00019P1 YW52S0002P1

A10-5

SK200-8 低压 NEW YN52S00102P1

A10-6

负压传感器 Pressure Switch LC52S00016P3

A10-7

高压传感器 Pressure Switch SK200-5/6 YN52S00027P1

A10-8

Pressure Switch PC200-7 7861-93-1651

A10-9

Pressure Switch PC360-7 7861-93-1650

A10-10

高压传感器 Pressure Switch PC200-8 7861-93-1812

A10-11

主泵压力传感器 Pressure Switch PC200-6 7861-92-1610

A10-12

压力传感器 PC200-5 7861-92-1540

QUALITY, HONESTY & SERVICE FIRST

A10-13

主泵压力传感器 Pressure Switch
9503670-500K 大宇高压

A10-14

主泵压力传感器 Pressure Switch
EX200-2/3 4436271 KM16-S13

A10-14A

ZAX200-5G 4703324

A10-15

主泵压力传感器 Pressure Switch
加藤 PT-W-82

A10-26

压力传感器 320-3065

A10-27

压力传感器 344-7389

A10-28

压力传感器 349-1178

A10-29

压力传感器 298-6488

A10-15A

加藤 KM10-P16

A10-16

住友高压 KM16-P03

A10-17

SUMITOMO
住友低压 KM15-P02

A10-17A

KM15-S46 2107744

A10-30

压力传感器 248-2169

A10-31

压力传感器 320-3064

A10-32

压力传感器 224-4535

A10-33

压力传感器 239-3478

A10-17B

KM15-S45 2107754

A10-18

CAT 高压传感器
E330D 260-2180

A10-19

CAT
E320D 434-3436HE00

A10-19A

KM16-5YC 7247998

A10-34

压力传感器 355-5321

A10-35

压力传感器 237-0957

A10-36

压力传感器 344-7390

A10-37

压力传感器 375-6126

A10-20

主泵压力传感器 Pressure Switch
E320C 221-8859

A10-20A

E320C/D 221-8859

A10-21

CAT330 224-4536

A10-21A

194-6726

A10-38

压力传感器 419-5574

A10-39

压力传感器 216-0420

A10-39A

大宇 DX 85PP78-01

A10-39B

JCB 55PP07-02

A10-22

压力传感器 344-7391

A10-23

压力传感器 296-5270

A10-24

压力传感器 344-7392

A10-25

压力传感器 238-0118

A10-40

P31Q8-40510

A10-41

VOLVO 17252661

A10-42

VOLVO 17212600

A10-43

VOLVO 17253748

<p>A10-44</p> <p>VOLVO 17216318</p>	<p>A10-44A</p> <p>VOLVO 2094364</p>	<p>A10-44B</p> <p>VOLVO 17202579</p>	<p>A10-44C</p> <p>VOLVO 17271141</p>	<p>A10-59</p> <p>柳工 2线 a:高压 b:低压</p>	<p>A10-60</p> <p>中联 三一 柳工</p>	<p>A10-61</p> <p>a:高压 R902603031 b:低压 R902603871 Rexroth 雷沃/力士乐</p>	<p>A10-62</p> <p>龙工</p>
<p>A10-45</p> <p>HYUNDAI 31Q4-40830 50Bar</p>	<p>A10-46</p> <p>31Q4-40800 500Bar HYUNDAI</p>	<p>A10-47</p> <p>31Q4-40820 100Bar HYUNDAI</p>	<p>A10-48</p> <p>31Q4-40810 200Bar HYUNDAI</p>	<p>A10-63</p> <p>龙工 223-16-0072 低压60Bar</p>	<p>A10-64</p> <p>龙工 低压50Bar</p>	<p>A10-65</p> <p>龙工 高压500Bar</p>	<p>A10-66</p> <p>徐工 高压 13牙 小螺纹 LC-XCMG-3-4-500Bar</p>
<p>A10-49</p> <p>SANY 三一低至60114798 50Bar</p>	<p>A10-50</p> <p>SANY PX-SHNY-S500BG M5134-C2549X-500BG</p>	<p>A10-51</p> <p>SANY M5134-C1952X-50BG 031209D132</p>	<p>A10-52</p> <p>SANY 三一高至60114799 500Bar</p>	<p>A10-67</p> <p>徐工 高压 16牙 大螺纹 LC-XCMG-500Bar</p>	<p>A10-68</p> <p>徐工 低压 / 原装 16.5牙 大螺纹 LC-XCMG-3-4-2050Bar</p>	<p>A10-69</p> <p>龙工 063G1801</p>	<p>A10-70</p> <p>龙工 063G1802</p>
<p>A10-53</p> <p>三一 SANY 高压</p>	<p>A10-54</p> <p>三一 SANY 高压500Bar</p>	<p>A10-55</p> <p>三一 SANY 低压50Bar</p>	<p>A10-55A</p> <p>三一 SANY 低压 KM25-E32</p>	<p>A10-71</p> <p>雷沃</p>	<p>A10-72</p> <p>PC3000 600Bar</p>	<p>A10-73</p> <p>CAT 400Bar</p>	<p>A10-74</p> <p>6D140 3330600</p>
<p>A10-55A</p> <p>三一 低压 0420641-5MPa</p>	<p>A10-56</p> <p>柳工/中联 低压60Bar 高压400Bar</p>	<p>A10-57</p> <p>压力传感器 3线 柳工 MBS3050060G1411 60Bar</p>	<p>A10-58</p> <p>压力传感器 3线 柳工 MBS3050060G1154 400Bar</p>	<p>A10-75</p> <p>6D140 3347907 6560-41-6100</p>	<p>A10-76</p> <p>6D170 3408587 6560-61-7102</p>	<p>A10-77</p>	<p>A10-78</p>