



Guangxi Ligong Machinery Co.,Ltd





LGMC (Guangxi Ligong Machinery Co., Ltd), is a company that specialized in the spare parts for LIUGONG all range machine parts, CUMMINS engine parts, ZF transmission parts for excavator, wheel loader, motor grader and bulldozer.

The company focuses on providing the genuine parts of high quality and low price to satisfy the requirements of different customers. Through the development, the company has established firm cooperation relationship with the construction machinery part dealers home and abroad. We have more than 2,000,000 machinery parts. No matter Original, OEM or High Copy, you can get whatever you want.



Our Advantage



Having a great advantage of location, LGMC is located in Liuzhou, a city that has extensive rail connections with the rest of China, and is the home of LiuGong Company, the biggest industrial base of Guangxi Province. In line with the principle of “Honesty, High quality, Reliability, and Efficiency”, LGMC has won great recognition in the market in just a few years and has gained support from major domestic manufacturers and trade organizations as well. LGMC has occupied the market relying on the good product quality, and good after-sales service and exported to South Asia, Southeast Asia, Africa, South America, Mid East, Eastern Europe, and other regions.

Our Service

STRONG STRENGTH

Perfect production and after-sales system, complete machine accessories can be produced, and we will provide you with VIP treatment

24 hours 7 days stand by with a professional selling team, We solve all kinds of problems in time, and provide specialized commentary on your questions. With the fast supply, perfect quoting system, and swift delivery methods, our company can settle the problems in time to reduce the cost for machinery stand-down. With the foundation of honest operation, and responsibility of helping the customer settle the problem in time, Our company gains a great honor in the customers of construction machinery industry. We hope to built a win-win situation with you.

目录Catalogue

1、动力系统配件Engine System.....	1
2、传动系统配件Drive System.....	2
3、液压系统配件Hydraulic System.....	3
4、制动系统配件Braking System.....	4
5、车架和工作装置Structure Parts.....	5
6、驾驶室和覆盖件CAB Parts.....	6
7、电器系统Electric system.....	7
8、压路机Roller Parts.....	8
9、平地机Grader parts.....	9
10、ZF配件ZF parts.....	10
11、滤芯Filter.....	11
12、其他Other.....	12

动力系统Engine System 1



发动机总成
Engine assy
6CTA8.3-C215



起动马达
Starting Motor
3957598 11C0092



发动机六配套
engine six supporting
6LT9.3L



 
喷油器
Injector
PB84P30 SP154350



风扇
Fan
40C3960



输油泵
Oil Transfer Pump
3936316 SP100673

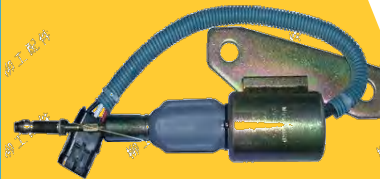


燃油切断阀
Fuel Shutoff Valve
3991625 SP100678




张紧轮总成
Tension Wheel Assembly
SP101886 WD. 612600060310



 空压机
Air Compressor
4100.4RT710100 SP104156

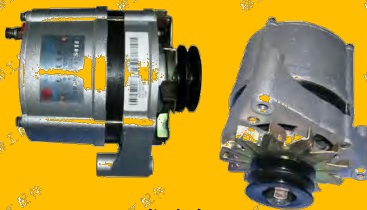

 发电机
Alternator
WD. AZ15000980058
SP102041

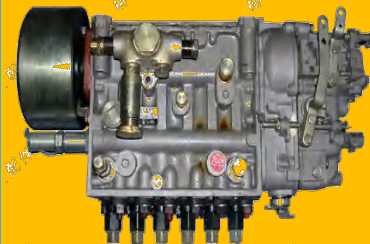

高压油泵
High-pressure Oil Pump
BHM6P115YAY301 (G3-6)
SP103305



 
进气门摇臂
Inlet Valve Rocker
WD. 614050048
SP101930




增压器
Turbocharger
J7M00-1118100-502



起动机
Starter
SP100562

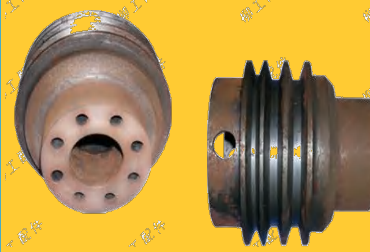

 皮带轮
Belt Pulley
WD. 612600020139
SP101875

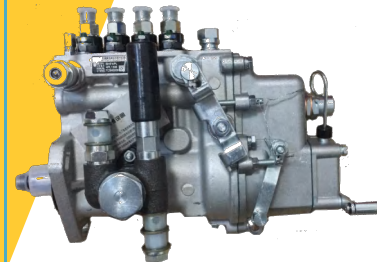


喷油泵
Injector Pump
4PL1306 SP127620



水泵
Water Pump
YTR4105G69. 510000



 起动机
Starter
WY20. 2873K059
SP104506

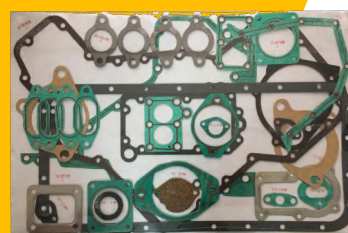

D9 修理包纸垫
Engine repair kit
D9



皮带涨紧轮
Belt Tensioner
C3976831 SP120022



后桥主传动
Bevel Gear As
41C0109X1



 
涡轮组
Turbine Group
52C0190



变速箱总成
Transmission
50CN



变速操纵手柄
Gear selector
ZF. 0501216205

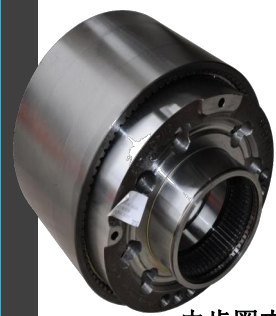

内齿圈支架
Ring Gear Carrier
ZF. 4474206031



 
行星齿轮
Planet Gear
ZF. 4464306161



行星轮架
Planet Carrier
ZF. 4474306211



直齿圆柱齿轮
Spur Gear
ZF. 4644308625

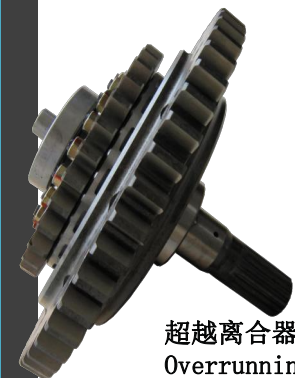

超越离合器组件
Overrunning Clutch
52C0071



变矩器
Torque Converter
ZF. 4168034034



控制单元
ELECTRONIC
ZF. 6057008011 37B0428



输出法兰
Output Flange
ZF. 4644309001



变速箱箱体
Gearbox Housing
ZF. 4644301402



 
离合器鼓总成; III挡
Coupling
ZF. 4644153



输入轴
Input Shaft
ZF. 4644302188



太阳轮轴
Sun Gear Axle
ZF. 4474306213

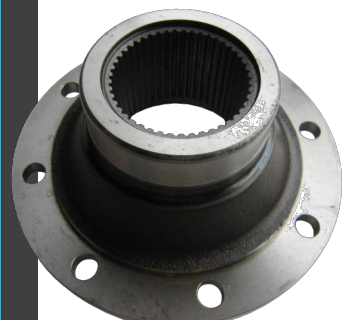

输入法兰
Input Flange
ZF. 4644302188



输入法兰
Input Flange
ZF. 4644302188



输入法兰
Input Flange
ZF. 4644302188



输入法兰
Input Flange
ZF. 4644302188



充液阀
Charge Valve
13C0218



 
先导阀
Pilot Control Valve
12C0572



转斗油缸
Tilt Cylinder
10C0024



先导阀
PILOT VALVE
12C0019

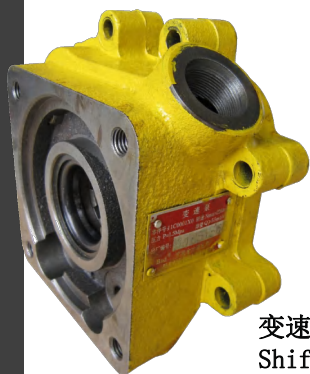

变速泵
Shift Pump
11C0001



分配阀
Control Valve Assem.
12C0016



缸体
Cylinder Block
13D0010X1



齿轮泵
Gear Pump
11C0007



动臂缸大腔钢管
Arm Cylinder Tube
10D0049



溢流选择组合阀
Valve
12C0037X0



 
动臂油缸
Arm Cylinder
10C0023



装卸叉油缸
Fork Cylinder
10C0199



齿轮泵
Gear Pump
11C0317

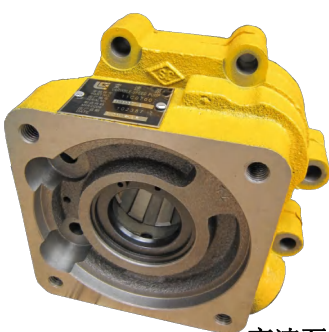

变速泵
Shift Pump
11C0700



变速操纵阀
Transmission Valve
12C0001



主安全阀
Safety Valve
12C0017



卸荷阀
Unload Valve
12C0786



分配阀
Control Valve
12C0385



转向器
Steering Unit
44C0016



转向器
Steering Unit
44C0016



气制动阀总成
Brake Chamber Assem.
13C0004



 
制动气室
Brake Chamber
13C0009



蓄能器
Accumulator
13C0076




制动阀
Brake Valve
12C0360

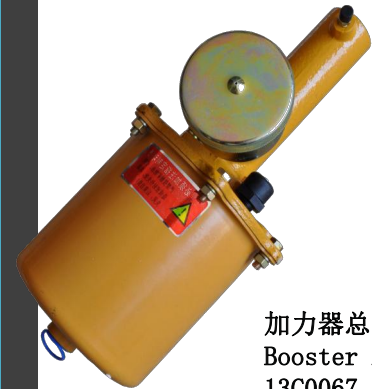

加力器总成
Booster As
13C0067



 
脚先导阀
Foot Pilot
12C0169

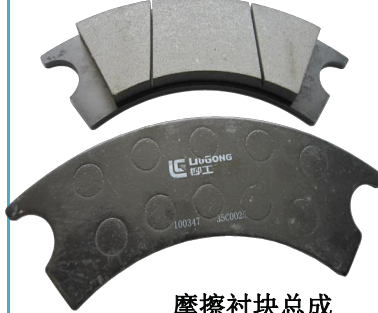

摩擦衬块总成
Brake
35C0025



 制动蹄总成
Brake Shoe Assem.
SP106729

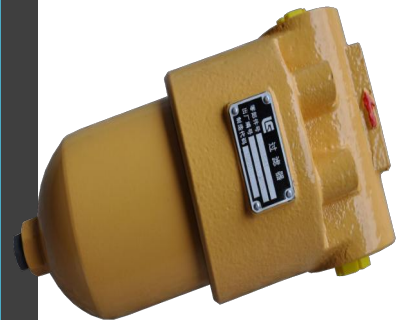


过滤器
Oil Filter
53C0541



三通接头
Tee Connector
02A0057



 储气罐
Air Tank
13C0015

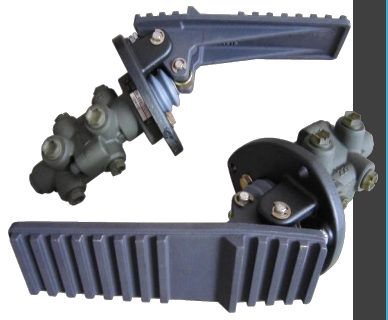

双路制动阀
Brake Valve
13C0219



空气干燥器
Air Dryer
13C0142



紧急制动阀
Conductor's Valve
13C0020



制动阀总成
Brake Valve Assembly
45C0022



组合阀
Combination Valve
13C0026



空气罐
Air Tank
13C0003



按钮阀
push buttonvalve
13C0059



拉杆轴
Pole Bearing
16D0015



 
制动油缸
Brake Cylinder
13C0014




销
Pin
11A0085



拉杆
Rod
16D1074

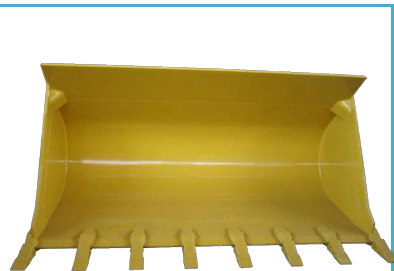

铲斗3.0方
Bucket 3.0 m3
22D0001

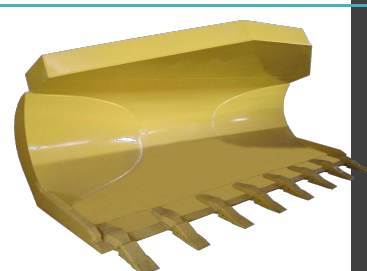 

侧斗2.5方
Bucket 2.5 m3
22D00017X0



铲斗3.0方
Bucket 3.0 m3
22D0001X9



铲斗4.0方
Bucket 4.0 m3
22D0024



铲斗1.8 方
Bucket 1.8 m3
22D0103X0



铲斗2.7 方
Bucket 2.7 m3
22D0113X0




铲斗3.0方
Bucket 3.0 m3
22D0231X0



铲斗3.0方
Bucket 3.0 m3
22D0752



 铲斗2.7 方
Bucket 2.7 m3
32E1184X0

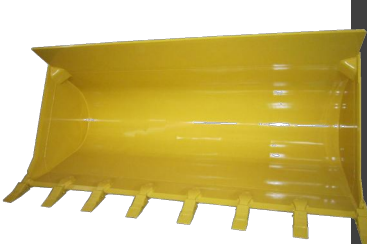


铲斗3.0 方
Bucket 3.0 m3
32E1717



铲斗2.7 方 方活动斗
Bucket 2.7 m3
32E1759



 付车架销
Pin
11D0011

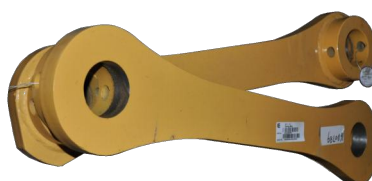

摇杆
Swing Rod
16D0789



拉杆销
Pole Pin
11D0065



后摆动支架
Bracket
24D0048



摇臂
Lever
21D0304



前摆动支架
Front Swing Bracket
24D0047



后摆动支架
Support
71A0108T0



举升装置
Lift Device
24C0804



侧玻璃
Glass
87A0273



 
右前侧玻璃
Glass
87A0028



门玻璃
Glass
87A0276



后门
Back Door
37C0173

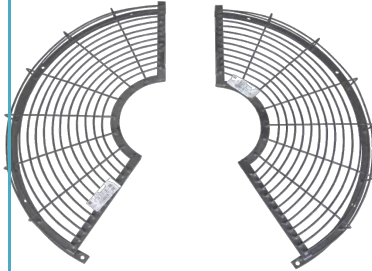

左防护罩
Protective Cover
45D0372



右防护罩
Protective Cover
45D0371



压缩机支架
Compressor Bracket
00D0959



高靠座椅
Seat
47C0289



司机椅总成
Seat Assem
47C0783X0



液压油箱
Hydraulic Tank
21C0235



窗体
Window Frame
47C0033



后小灯箱
Rear Position Light Box
04D0111



盖
COVER
36D0237



右挡泥板
Fender
40D0611



液压油箱
Hydraulic Tank
21C0053X0



后罩总成
Cover ASZ
48C1053



扶梯
Handrail
41D0359



销轴
Shaft
61A0045



拉杆轴套
Pole Bushing
55A0007



电磁阀
Solenoid Valve
12C3697



压力开关
Pressure Switch
13C0078



大灯
Flood Light
32B0026



工作灯
Work Light
32B0096



右工作灯总成
Work Light Right
32B0078



 
右后尾灯
Light Assem. Right
32B0054



组合式前大灯右
Combination Front Flo
32B0099



气压表
Air Pressure Gauge
35B0075

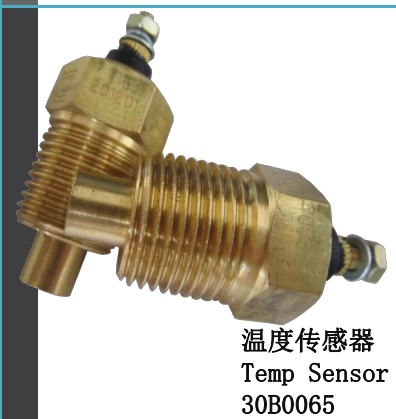

温度传感器
Temp Sensor
30B0065



仪表总成
Instrument Assem
46C1386



变矩器油压表
Oil Pressure Gauge
95C0007



定位门锁
Lock
47C0066



空调开关
Switch
SP104432



电器集中控制盒
CONTROL BOX
46C6202



雨刮器总成
Wiper AS
47C0080



继电器
RELAY
31B0042



油位计
Sensor
30B0158



蒸发风机
Evaporator
SP103335



控制箱线束
Unit Harness
08C0996



电锁
Lighter
34B0118



花键轴/花键二
Spline Shaft
62U0001 /62U0002



第一轴轴承盖
Bearing Cap
SP108700 A610130



电磁阀
Solenoid Valve
MY100054



 
转向油缸
steering cylinder
10W0004



滚针轴承
Bearing
SP105689 A610117



减震器
Shock absorber
35W0027

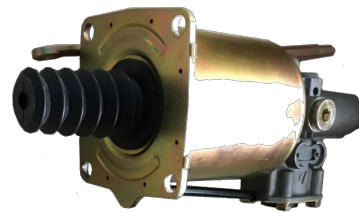

离合器分泵
Clutch pump
A101023



花键轴二
Spline Shaft
06X0002



花键轴一
Spline Shaft
06X0008



联轴器
Coupling
35W0034



离合器压盖总成
Clutch Cover Assembly
23W0001



离合器从动盘总成
Clutch Driven Disc Assembly
23W0003



离合器助力器
Clutch Booster
13W0003X1



离合器总泵
Clutch Master Cylinder
11W0010



停车电磁铁
Shut Off Solenoid
SP119217



右振动室
VIBRATORY HOUSING-RH
22W0012



双列圆锥滚子轴承
TAP. ROLLER BRG
23V0064



圆柱滚子轴承
ROLLER BEARING
22V0012



液压吸油滤网
SUCTION
STRAINER
53K2004



进气软管
Intake Hose
30A0608



举升控制器
Lift Control Unit
31B0075



双排链轮轴
Double chain wheel
83513201



制动鼓
Brake Drum
SP105976



制动蹄
Brake Shoe
SP109957



 
齿套
Tip
72A0417



举升控制线
Lift control line
08C0712



行星减速器壳体
Planetary reducer housing
83513202

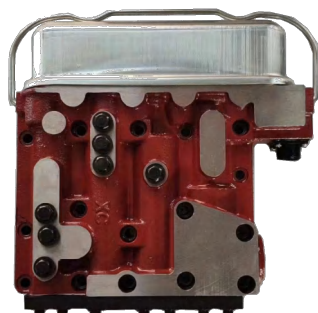

操纵阀
Control Valve
6WG180



双排链轮
Duplex chain
wheel 85513022



电器集中控制盒
CONTROL BOX
46C5663



衬套
Bush
27A2493



双联齿轮泵
Gear Pump
60047358
p9714/4.5 (1141012093)



传动轴总成
Drive shaft
41C0169



档位选择器
Range Selector
ZF. 6006022230



变矩器油温表
OIL TEMP GAUGE
35B0097



圆螺母
Round nut
85513040/SP109952



花键毂
Spline hub
80513005/SP109922



前轮转向油缸
steering cylinder
10C0681



滚子链
roller chain
55410001



变速操纵阀总成
Gearshift System
ZF. 4644159347



制动蹄片
Parking Brake
ZF. 0899202438



配油法兰
Oil Feed Flange
ZF. 4644302250



齿轮泵
Gear Pump
ZF. 0750132143



输入总成
Input
ZF. 4644102134



轴
Axle
ZF. 4644308618



电脑控制盒
Unit Control
ZF. 6041232232



手刹片
Brake
ZF. 0501317039



输入法兰
Input Flange
ZF. 4460325050



 
大小螺旋齿轮
Bevel Gear Set
ZF. 4460215338



托架
Axl f
Dr. Housing
ZF. 4460265211



差速器锥齿轮
Diff. Bevel Gear
ZF. 4461301030

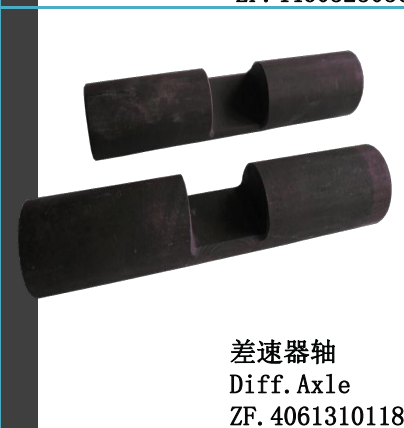

差速器轴
Diff. Axle
ZF. 4061310118



骨架油封
Shaft Seal
ZF. 0734319605



轴承
Bearing
ZF. 0735455314



活塞
Piston
ZF. 4644306376



 
滚柱轴承
Roller Set
ZF. 0750119101



球轴承
Ball Bearing
ZF. 0750116104



线束
Wiring Harness
ZF. 4644206035

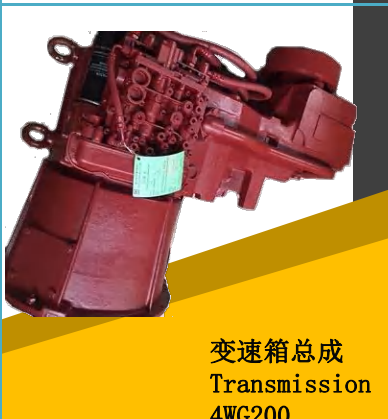

变速箱总成
Transmission
4WG200



油水分离器滤芯
Filter Element
53C0051



机油滤芯
Engine Oil Filter Element
53C0053



机油滤芯
Engine Oil Filter
Element
53C0054



柴油预滤器
Filter Element
53C0045



柴油滤芯
Fuel Filter Element
53C0052



燃油预滤器
Filter Element
53C0104



燃油滤清器 (潍柴)
Fuel Filter
SP115134



油水分离器 (玉柴)
Separator
SP115359



柴油滤芯 (玉柴)
Filter Element
SP110611



机油滤清器 (康明斯)
Oil Filter
SP118979



机油滤芯
Engine Oil Filter Element
53C0214



机油滤清器
Oil Filter
SP102047



除水放心滤 (潍柴)
Water Separator
SP115136



粗滤放水杯 (潍柴)
Cup
SP120959



机油滤清器
Oil Filter
SP102047



滤油器
Filter
ZF.0750131053



空气滤芯
Air Filter
SP104467



回油滤油器
Filter
53C0005



空滤芯
Air Filter
SP100551



空滤芯
Air Filter
SP110635



仪表总成
Instrument panel
35J2001 (5T forklift)



线束总成
wiring harness
08C4621 (3T forklift)



多路阀
Selector valve
12K2046(forklift)



仪表盘
Instrument panel
35B0205 (3T forklift)



液力离合器
Hydraulic clutch
YDS30.901 (forklift)



齿轮泵
Gear pump
CBHZ-F315-ALHL(forklift)



油位计
Oil Dipstick
30B0209 (EXCAVATOR)



过滤器
Filter
37C1270 (EXCAVATOR)



联轴器
Coupling
40C1261 (EXCAVATOR)



空气滤清器
Air filter
88A0084 (EXCAVATOR)



滤芯
Filter element
39A0003 (Loader)

MORE SPARE PARTS AREN'T SHOWN HERE . IF YOU HAVE ANY INTERESTS, PLEASE FEEL FREE TO CONTACT US !